

## 酷咕鴨輕漾手推車【售後服務保證卡】

1. 本公司銷售之手推車出廠前經嚴格品管。在正確使用及保養下應能正確地表現其優越性能。本產品自購買日期開始，享有一年內免費維修之售後服務。(運費恕不在此列內)
2. 本保證卡如有遺失，恕不補發，敬請妥善保存。
3. 本保證卡所提供之售後服務，不適用下列情況：
  - a. 使用不當或不慎摔落、泡水、潮濕所造成之故障及損壞。
  - b. 自行拆裝所發生之破損或故障等，恕不列入保證範圍。
4. 為保證顧客之權益，請務必填寫購買日期並加蓋經銷商之店章，否則本公司將以本產品之製造日作為保證期之起算日。
5. 未經本公司經銷商蓋章，或塗改購買日期者，一律視為無效。

※憑本保證書於保證期間內，本書所記載之內容可免費維修。超過保證期限，本書不具任何法律效力。  
若對保證期限後的維修有任何不了解的地方，請逕向本公司客戶服務中心或經銷商洽詢。

產品貨號：	KU6032 酷咕鴨輕漾手推車	
購買日期：	年	月 日
顧客姓名：		
電話：		
地址：		
店家：		
店章：		



吉尼寶貝國際股份有限公司  
JINI BABY INTERNATIONAL CO., LTD.


No.27, Lane 290, Sec.2, Jia Dong Road, Chang Hua City 500-84, Taiwan

彰化市茄苳路2段290巷27號 統一編號:12617114 產地：中國 MADE IN CHINA

www.ku-ku.com.tw TEL：0800-223358

# 酷咕鴨輕漾手推車 SHOW-YOUNG STROLLER

## 使用說明書 Instruction manual

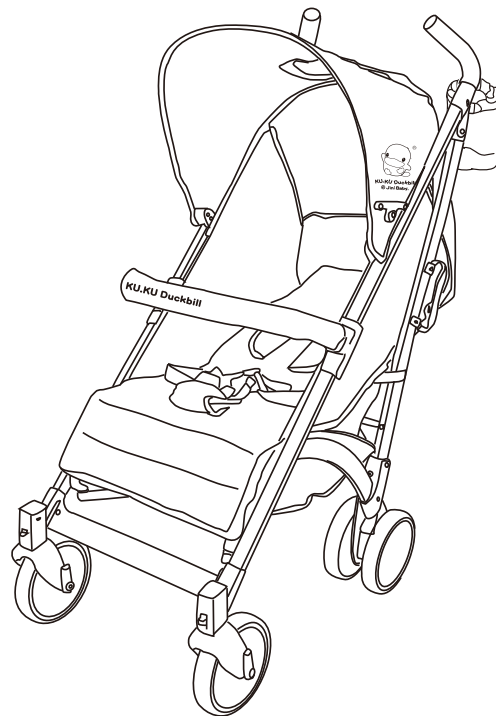

### KU-6032

展開尺寸: 46x75x107cm 收合尺寸: 33x37x98cm

適用對象: 初生~36個月、15公斤以下之嬰幼兒


Expand size: 46X75X107cm / Collapse size: 33X37X98cm

Applicable age: 0-36 months / Maximum weight limits: Up to 15kgs



使用前請仔細閱讀此說明書，並妥善保存，以供日後參考。

Please read these instructions carefully and keep for future reference.

## ■ 配件說明 Parts list

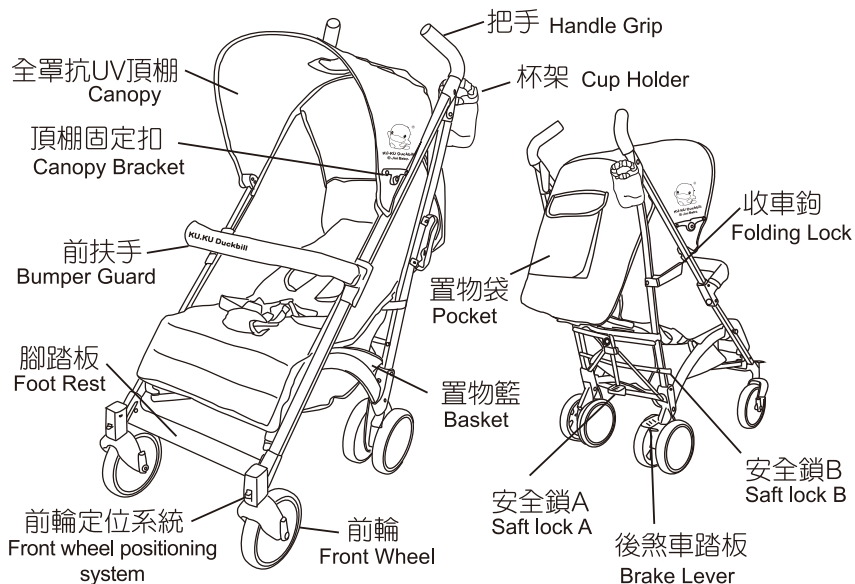


## ■ 安裝說明 Unfolding and Assembling

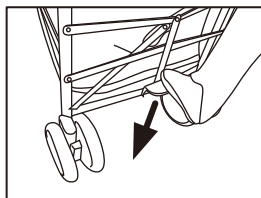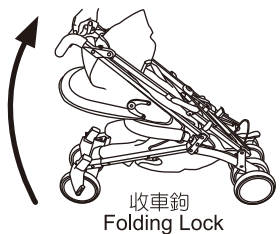

安全鎖A  
Safe lock A

1. 開啟推車：解開車體側邊的收車鉤，雙手握住手把向上拉起車體使車體展開，之後用腳踩下安全鎖A，即可展開手推車。

To unfold frame: see fig1, release the locked folding latch; Hold handle grip by one hand, push forward away the front leg until more than half has been unfolded. Step down the safe lock A and lift up handle grips and now the stroller is fully unfolded.

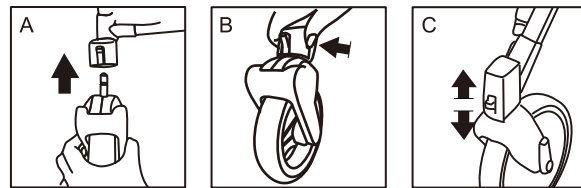

2. A 安裝前輪：將前輪插入前輪支架上，聽到“喀嚓”聲後即表示安裝完成。



B 拆卸前輪：按住內側按鍵，將輪子向下拆卸即可。

C 前輪定位：向下壓即可鎖定前輪方向，向上推即可解鎖。

A. To assemble front wheels: make the parts of the front wheels inserted in the support, the block flipping out.

B. To disassemble front wheels: Press the block pull the front wheels out, the wheels removed.


C. Use front swivel wheels: To lock swivels, push the levers down. To unlock swivels, lift the levers up.

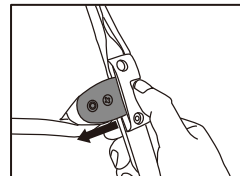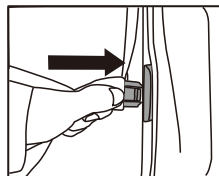

3. 安裝頂棚：將頂棚固定扣插入兩側卡桿位置，聽到“喀”聲後即可。

拆卸頂棚：按壓固定扣後往外拉出，即可拆卸。


To assemble/disassemble the canopy: align the canopy frame latches with plastic spring house holes on handle. Press into until hear “clicks”; press up the plastic spring from the bottom hole of plastic house, pull outside canopy frame to disassemble.

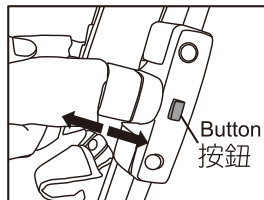

4. 安裝前扶手：兩側的按鈕對準相應位置，直接插入前扶手卡桿即可。

拆卸前扶手：按下扶手兩側的按鈕，用力向後拉即可。


To assemble/disassemble the front bumper bar: align front bumper pegs with the holes on bumper adaptors, slide and press into unit hear “clicks”; press down both buttons to disassemble bumper from adaptors.

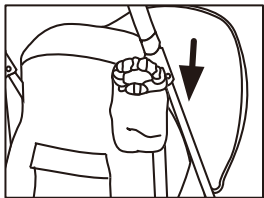


5. 安裝杯架：對準卡筍向下壓後即安裝完成。向上拉起即可拆卸。

To assemble/disassemble the cup holder : align the cup holder with the latch on the handle, press up to disassemble holder from handle.

## ■ 使用說明 Use Instructions

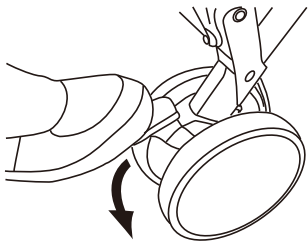


1 單踩雙煞設計：踩住後輪煞車踏板，後輪即處於煞車狀態。  
解除煞車：腳尖將煞車踏板向上提，煞車將鬆開。  
To use brakes: step down brake levers and the stroller is braked ;lift up brake lever and the braking is released.

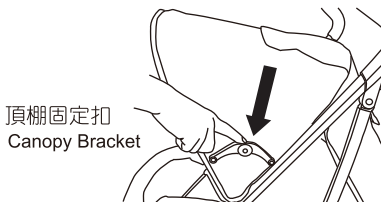

頂棚固定扣  
Canopy Bracket

2 頂棚：頂棚固定扣向下壓，頂棚即可打開，向上提，頂棚將收攏。


To use canopy: press down brackets to unfold the canopy; pull up the brackets to fold the canopy.

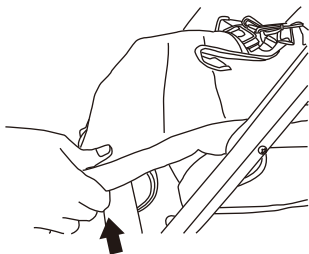

腳靠墊調節鈕 Lever

3 調節腳靠墊：按住腳靠墊調節鈕，腳靠墊可上下調節高度。


To adjust the stretchable footrest : squeeze both levers and press down footrest to adjust the rest to lower position; lift up footrest to set up the rest to higher position.

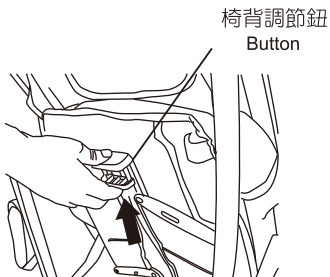

椅背調節鈕  
Button

4 調整椅背：按住椅背調節鈕，椅背可上下進行調整，可四段調整。

To use reclining back rest: pull up recline button, the backrest will rise to desired height; press down the recline button, the backrest will down, total four step.

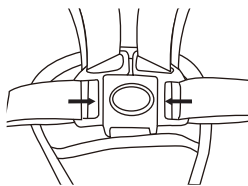


5 五點式安全帶：按住中間按鍵，即可解開安全帶。

To use restrain system: to unlock buckle, press in on center button and pull harness out from each side. to lock buckle, push each side of harness back into buckle unit each clicks in place.

注意：請確實扣緊安全帶！以防意外發生！


WARNING: Always use the crotch strap in combination with waist belt

## ■ 收納說明 To Fold

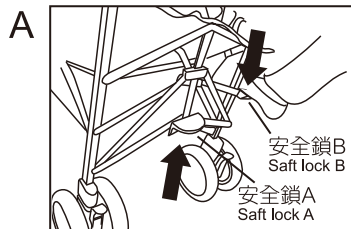


A

安全鎖B  
Soft lock B  
安全鎖A  
Soft lock A

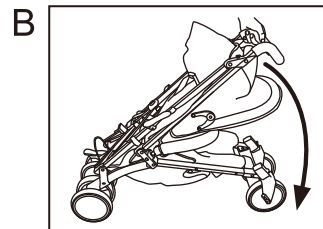


B

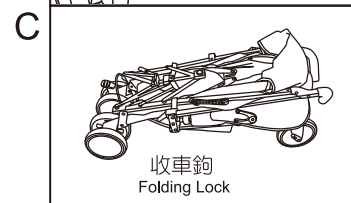

C

收車鉤  
Folding Lock

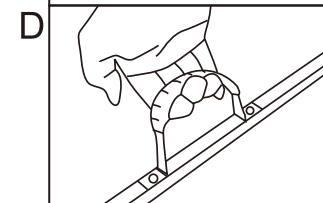

D

A-用腳尖將安全鎖A向上提，再踩下安全鎖B，直到二道鎖處於鬆弛狀態。

B-手把向前推，直到車台收攏。

C-收車後，檢查自動收車鉤是否已經扣住車體。

D-提起提把即可。

(A) Lift upward the soft lock A with the toe of your shoe. Press down the soft lock B gently until the lock has released.

(B) Push the handles over and the stroller will naturally close.

(C) Ensure the folding latch is locked.

(D) Lift up the carrying handle.

## 使用警告注意事項：

- 請按照本說明書操作，以避免不正確的操作方法而損壞本產品或傷害您的孩子。
- 使用前，請檢查各部零件是否安裝正確、連接處是否固定。
- 當推車停下時，請踩住煞車。
- 使用時，請不要將孩子單獨留在車內。
- 使用時，請確保孩子在您的視線範圍內，以免孩子受到傷害。
- 請確實使用安全帶。
- 置物籃最大承受重量4kg，置物袋最大承受重量1kg。
- 本車最大承受動態重量15kg，不得超重使用。
- 本車適用年齡範圍：0-36個月。
- 注意不要讓孩子從座位上爬出或站立。
- 不要在樓梯或手扶梯上使用手推車。
- 不要在高低不平的場地、火爐附近等危險場所使用本車。
- 避免在潮濕寒冷或高溫的環境中使用或存放，並遠離火源或高熱源處。
- 本產品不適用於不正常使用。
- 使用推車時請勿奔跑或劇烈搖晃。
- 搬運推車時請勿使用前扶手處搬運，收合或搬運時勿將小孩置於推車上。
- 請勿乘載兩人以上幼兒。
- 當推車行駛顛簸或崎嶇不平路段時請鎖定前輪。

## 清潔保養：

- 為了確保您的寶寶免受意外傷害，請經常對手推車進行檢查與保養。
- 布套清潔時，拆解後請直接用中性清潔劑清洗即可。
- 定期檢查是否有螺絲鬆動、零件損壞或縫線斷裂痕跡，如有必要，請更換破損的部件。
- 進行拆裝時，請仔細按照說明書操作，以免造成不必要的傷害。

**材 質：** 鋁管、鐵、塑膠、布料、泡綿。



### 警告

使用前，請仔細閱讀此說明書，並妥善保存此說明書供以後參照。錯誤操作可能導致兒童受到人身傷害。

Please read these instructions carefully for future reference.  
Your child's safety may be affected if you do not follow these instructions.

## WARNINGS:

- Follow the manufacturer's instructions at all times.
- Put on all the brakes whenever you park the stroller.
- Do not leave the children unattended.
- Do not carry extra children or bags on this stroller, unless in an approved accessory.
- Make sure children are clear of any moving parts if you adjust the stroller, otherwise they may be injured.
- Please ensure that the safety harness is adjusted and used at all times.
- Check that the stroller is fully erected and that all safety locks are engaged before placing a child in the stroller.
- Do not carry more than 4kg in the basket or 1kg in any pocket (If Supplied).
- The weight of the child using this stroller should not be more than 15kg.
- Suitable age: 0-36 months.
- Do not allow children to stand on the seat or footrest.
- Do not use on stairs or escalators.
- Do not use the stroller near an open fire, barbecue, or exposed flame.
- Engage front wheel swivel lock, to lock front wheel / wheels when travelling on rough or uneven surfaces.
- Do not run or jog with this stroller.
- Do not attempt to lift the stroller by the bumper bar, it may disengage.
- This product is not intended for commercial use.

## MAINTENANCE:

- To avoid risk of injury to your child, please check and maintain the stroller periodically.
- Clean the fabric: use the brush or other clean tools, other parts: use the home-usage soap or lotion.
- Check whether there are loosen screws, damaged parts or crack in cloth, if necessary, replace the bad ones, Do the rehabilitate restrictly according to the instruction.

**Material:** Aluminum tube, Iron, Plastic, Fabric, Foam