

Step-1 安裝輪組、止滑座
Wheels and Preventers Assembly


將兩個旋轉前輪、兩個直行後輪和六個止滑座分別插入底盤下方的相應孔中。

確保將它們壓到底，以免掉落。（圖1~3）

Insert two swivel front wheels, two rear linearity wheels and six preventers into the corresponding holes under the base plate respectively. Make sure they are pressed to the end to avoid falling off. (Figure 1-3)



Step-2 座椅組裝
Seat Assembly

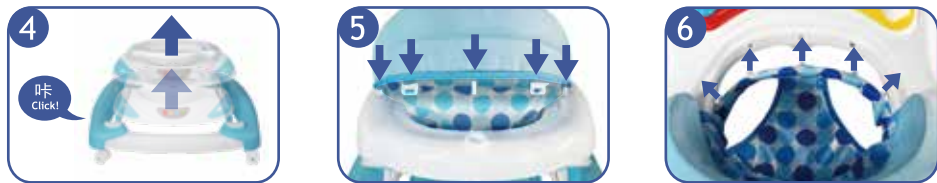

1. 將車架向上拉起，直到出現“咔”一聲。（圖4）
2. 將卡扣插入座椅後部的孔縫中，並確保所有卡扣均已卡住。（圖5）
3. 將另外五個塑料釘插入前面的孔中，然後向下推以牢固地固定座椅。（圖6）

1. Lift the upper tray to the highest position. (Figure 4)
2. Insert the buckles into the gaps at the back of the seat, and make sure they are all stuck. (Figure 5)
3. Insert five other plastic pins into the holes at the front, and push them downward to make the seat fixed firmly. (Figure 6)


Step-3 安裝音樂玩具盤
Install the Music Toy Tray

1. 將2個1.5V AA電池(3號)依正確的正負極裝入電池盒中。始終將蓋子鎖緊，以免發生危險。（圖7）
2. 將音樂盤放在上托盤上，推入旋鈕並旋轉將音樂盤鎖定。（圖8、9）
3. 將後視鏡插入側面的孔。

注意：使用不可充電的電池。不同類型或新舊電池不能混合使用。請取出電力耗盡的電池。

1. Insert two 1.5V AA batteries with correct polarity into the battery case. Always keep the cover screwed to avoid dangers. (Figure 7)
2. Place the music tray on the upper tray, pushing in and turn the knobs vertically to lock it. (Figure 8、9)
3. Insert the mirrors into the holes on the side.

Note: Use non-rechargeable batteries. Different types or new and used batteries can not be used in mixture. Exhausted batteries should be removed.

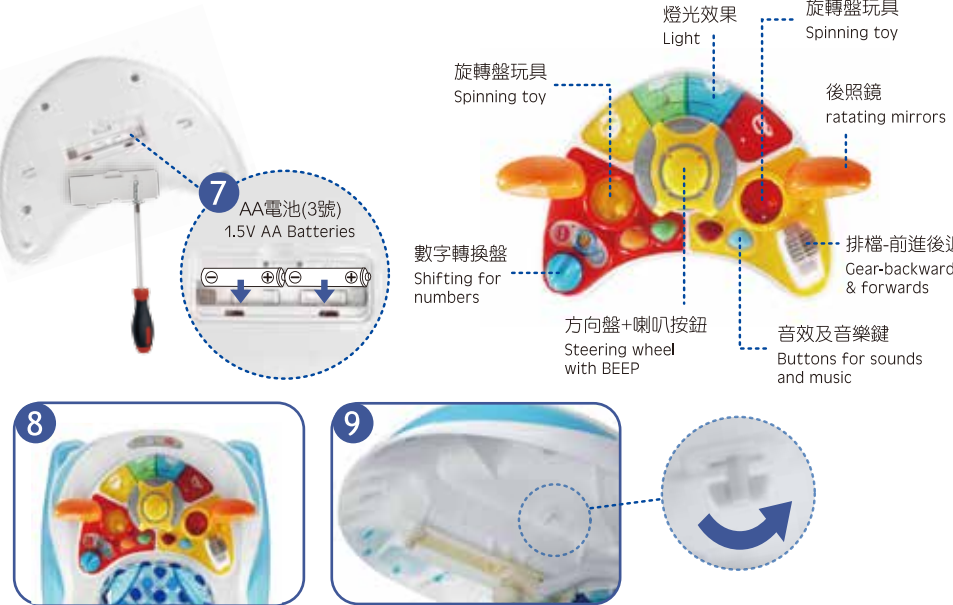

Step-4 安裝把手
Install Push Bar

將把手插入對應的孔，請確保鐵管已牢固固定。（圖10）

Insert the push bar into corresponding holes, especially makes sure the iron tube is firmly fixed. (Figure 10)




Step-5 轉為搖椅功能
Rocking Function Transformation

1. 同時按下底座側邊的兩個方形按鈕，然後將搖椅腳向地板折疊以使其站立。另一側相同動作。（圖11、12）
2. 再次按下方形按鈕，並將搖椅腳折回原本底座的位置。即可轉換成學步車。（圖13）
3. 將腳踏墊鉤在鐵管上，使其平放於腳。（圖13）

1. Press the two square buttons on one side of the base at the same time, then folding the leg towards floor to make it stand. Same as the other side. (Figure 11、12)
2. Press the square buttons again, and folding the leg back to the original position to flat the base. It can be used as a walker again. (Figure 13)
3. Hook the mat on the iron tubes, making it flat for the feet. (Figure 13)

注意：請在操作搖椅或學步車功能時請將寶寶抱離車體。

Caution: When operate the functions of rocking chair or walker, please hold baby away from cart.

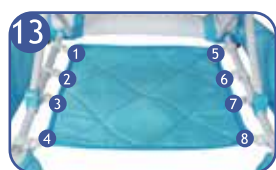


Step-6 高度調節
（提供3個高度位置）
Height Adjustment
(3-height position available)

1. 將座椅提升到最高位置。
2. 同時按下並旋轉調節按鈕，向前滑動即可降低座椅。（圖14、15）

1. Lift the seat up to the highest position.
2. Press-and-turn the adjuster button at the same time, and slide it to the front to lower the seat. (Figure 14、15)

注意：請在操作上述功能時請將寶寶抱離車體。

Caution: When operate the functions, please hold baby away from cart.

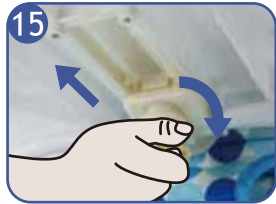

Step-7 抑止滑落功能
Anti-slip Preventers

學步車下盤有六個止滑座。

寶寶乘坐時，若不慎滑到樓梯口可止滑，抑止滑落。

There are 6 brakes in the base of walker to stop it from falling down steps and stairs.



感謝您購買酷咕鴨成長學步車！使用前仔細閱讀說明書並留存以備參照，未遵守說明書時，兒童可能會受傷。

本產品僅適用於約6個月無輔助而能自行坐著之兒童，不適用於能自行走路或體重超過10公斤之兒童。

Thank you for purchasing the product. Please read the instructions carefully before using it and keep them for future reference. The child may be hurt if you do not follow these instructions.

This baby walker is intended to be used by children who can sit up unaided, approximately from 6 months. It is not intended for children who can walk by themselves and weigh more than 10Kg/26.5lbs.

警告

- 警告！切勿留置兒童無人照顧。
- 警告！當兒童在嬰幼兒學步車中，將能走得很遠且快速移動。
- 防止進入樓梯、台階及不平坦表面。
 - 遠離所有火源、加熱及廚房用具。
 - 遠離熱液體、電線及其他潛在危險。
 - 防止碰撞玻璃門、窗及家具。
 - 如果任何組件斷裂或遺失，切勿使用嬰幼兒學步車。
 - 此嬰幼兒學步車只能在短時間內使用（20分鐘內）。
 - 勿使用或更換非製造商或經銷商認可之零件。
- 警告！勿於無成人注意下使用。
- 警告！每次使用不宜超過30分鐘。
- 警告！限於無危險障礙之平地使用。
- 警告！使用時，應確認嬰兒雙腳著地。
- 警告！搬動時，應先將嬰兒抱離。
- 警告！使用時，應遠離樓梯、門窗、斜坡及水池。
- 警告！使用時，應遠離火爐、電熱器等熱源。
- 警告！使用前應確實盤立及固定各機件，以確保安全。
- 警告！請確實安裝好玩具零件，以防止嬰兒吞食。

Warning

- Warning! Never leave the child unattended.
- Warning! The child will be able to reach further and move rapidly when in the baby walker.
- Prevent access to stairs, steps and uneven surfaces.
 - Guard all fires, heating and cooking appliances.
 - Remove hot liquids, electrical flexes and other potential hazards from reach.
 - Prevent collisions with glass in doors, windows and furniture.
 - Do not use the baby walker if any components are broken or missing.
 - This baby walker should be used only for short periods of time (less than 20 minutes).
 - Do not use replacement parts other than those approved by the manufacturer or distributor.
- Warning! Do not use in the absence of adults.
- Warning! Do not use for more than 30 minutes per session.
- Warning! Only use the baby walker on the even surface and without any danger or hurdles.
- Warning! Please make sure the baby has both feet on the ground. When the child is in the walker, its feet must touch the floor.
- Warning! Please remove the baby when you move the baby walker.
- Warning! Please keep from stairs, door sills, slopes and pools when the baby walker is in use.
- Warning! When using the walker ensure that the child cannot access stairs, uneven surfaces, slopes or unstable floors, swimming pools or other sources of water. Only use the baby walking frame on flat, stable surfaces.
- Warning! Please stay away from heat sources such as fire stoves and electric heaters when the baby walker is in use.
- Warning! Please make sure all the mechanical parts have been upside and fixed, to ensure safety.hazard.
- Warning! With toys Warning! Please avoid any swallowing by the baby.

◆學步車 + 搖椅設計

可當學步車，也可當搖椅，讓寶寶在玩樂中輕鬆學習。

◆可拆式控制握把

可控制寶寶的方向，讓寶寶學習之路更加安全。

◆底部安全防滑片

可防止學步車在有階梯的地方衝出，避免嬰兒受傷。

◆獨立音樂盤

可取出作獨立玩具，內附多種音樂、小玩具，可玩性高。

◆護腳層布設計

讓寶寶雙腳與地面隔離，不讓寶寶隨意移動，可拆式設計安全又方便。

◆Converts to rocking mode

2 modes of enjoyment - rocker for the initial months and walker when your child learns to walk.

◆Removable control handle

Long push handle that allows parents to help toddlers roll along, which can be easily removed.

◆Non-slip pads

It can prevent the baby walker from bouncing out when in a flight of stairs.

◆Detachable play tray

The music tray can be taken out as an independent toy. It has kinds of music and small toys to keep your child entertained.

◆Supportive foot pad in rocker mode

Specially designed footrest which can be used when the walker is being pushed.



主要製造材料：鐵管、塑膠、布、海綿。 Materials: Iron Pipe, Plastic, Cloth, Sponge.

Step-1 收合車架
Fold the Cart Frame

1. 同時按下並旋轉調節按鈕。
2. 向前滑動即可收合車架。

Press-and-turn the adjuster button at the same time, and slide it to the front to fold the walker. (Figure 15、16)

注意：請在操作上述功能時請將寶寶抱離車體。

Caution: When operate the functions, please hold baby away from cart.



Step-2 拆下把手
Disassemble the Handle

1. 將把手固定於底座上的卡榫往外扳開。
2. 向上抽出把手即可。

1. Press inward the latch of fixed handle in the seat.
2. Pull out the handle upward.

【維護及清潔保養】

1. 使用前，請確保已鎖緊各固定機件。
2. 請經常清潔各止滑座的接觸面（防滑橡膠）以防跌落，每次使用後請檢查每個螺絲部位是否確實鎖緊。
3. 請勿在潮濕，寒冷或高溫的環境中使用，不使用時請將其放在安全的地方。
4. 座布清洗請使用溫水和中性洗劑浸泡再以手洗，脫水晾乾即可。
5. 車架請使用濕布擦拭即可。

〔Care and Maintenance〕

1. Make sure every fastened piece is tightened before use.
2. Please often clean friction parts of every preventer (anti-falling rubber) in case of falling down steps, and always check and fasten the screwed joints after using each time.
3. Do not use in moist, frigid or high-temperature environments, keep it in safe places when not being used.
4. Removable fabric covers and trims may be cleaned using warm water with a mild detergent.
5. Allow it to dry fully, preferably away from direct sunlight.
5. Clean plastic and metal parts with a damp cloth or a light detergent.

酷咕鴨成長學步車【售後服務保證卡】

- 1.本公司銷售之學步車出廠前經嚴格品管。在正確使用及保養下應能正確地表現其優越性能，本產品從購買日期開始，享有一年內免費維修之售後服務(未含來回運費)。
- 2.本保證卡如有遺失，恕不補發，敬請妥善保存。
- 3.本保證卡所提供之售後服務，不適用下列情況：a.使用不當或不慎摔落、泡水、潮濕所造成之故障及損壞。b.自行拆裝所發生之破損或故障等恕不列入保證範圍。
- 4.為保證顧客之權益，請務必填寫購買日期並加蓋經銷商之店章，否則本公司將以本產品之製造日作為保證期之起算日。
- 5.未經本公司經銷商蓋章，或塗改購買日期者，一律視為無效。

購買日期：	
產品貨號：	KU6041 酷咕鴨成長學步車
姓名：	電話：
地址：	店章：
店家：	

